




1. Separate cutting guide and clamp from bowl.

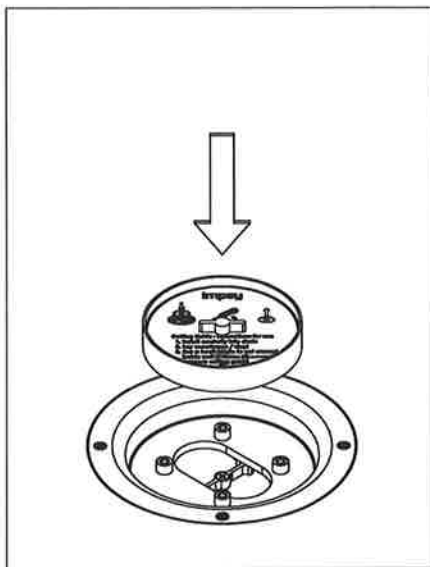

2. After Dec and bowl are fixed in place, install cutting guide into bowl. Ensure cutting guide sits centrally and flush with top of bowl. Cutting guide can be left in place to act as debris shield until membrane is layed.

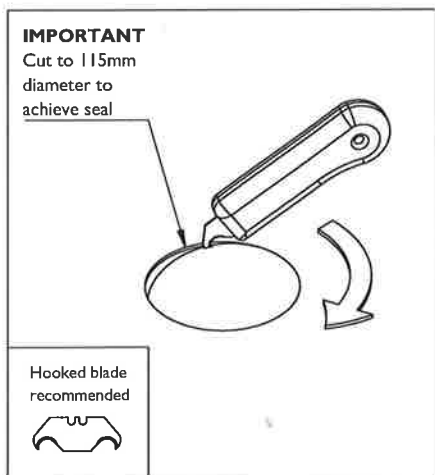

3. After laying membrane/vinyl over the top of the cutting guide, cut around inside wall of cutting guide using a hooked blade. Ensure cut is central to drain and 115mm diameter.

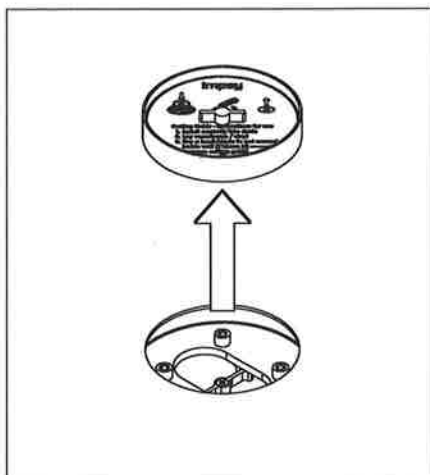

4. Remove cutting guide and proceed with installation.

SAFETY

If you are unsure about any part of the installation, please contact our technical department on 01460 258 682

Incorrect installation will invalidate the guarantee.

Wear safety goggles, shoes and appropriate clothing.

Issue 1
May 2015
part no. L700410